




# **AD383 - GREASE FILLER PUMP**

## **SERVICE INSTRUCTIONS**




# DESCRIPTION

Grease Filler Pump is an ideal grease filling solution to easily load bulk or combination grease guns from bulk grease containers.

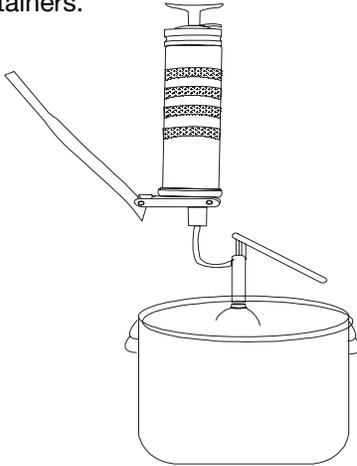

**Delivery:** 420 gms (14 oz) per 15 strokes

The pump comes complete with a female loader fitting to adapt to the loader valve fitted on grease guns, Drum Cover and Follower Plate.

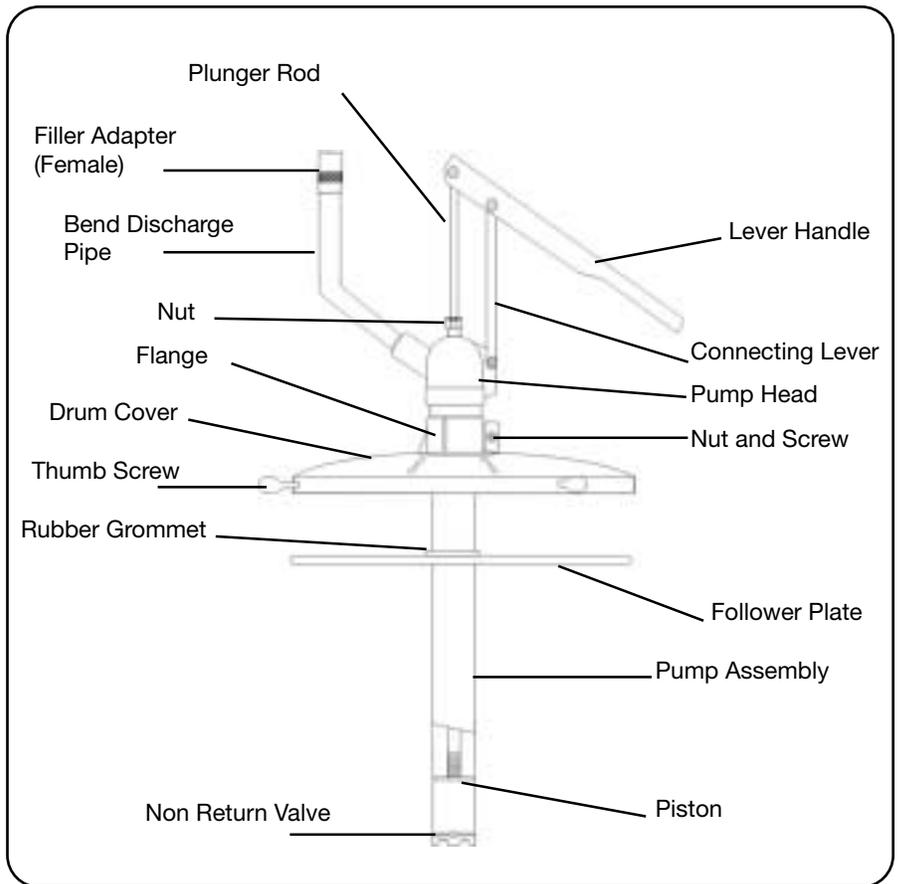

# ASSEMBLY

1. Insert the pump assembly through the flange fitted on the drum cover.

**Note:** Do not tighten the nut & screw to clamp the tube assembly with drum cover.

2. Insert the follower plate in grease container. Push down firmly onto the grease until grease emerges through the rubber grommet. (Fig 1)

3. Insert the pump tube assembly along with the drum cover through the rubber grommet of follower plate, till the pump tube touches the base of the container. (Fig 2)

4. Adjust the drum cover on the pump tube assembly to ensure it seats firmly on to the rim of grease container.

5. Hand tighten the 3 thumb screws on the drum cover assembly to fix the drum cover firmly on the grease container  
**Note:** Take care to tighten the thumb screws evenly on to the grease container.

6. Tighten the nut & screw on the flange of the drum cover to hold the tube assembly firmly in place

**Note:** Do not over tighten the nut & screw assembly.

7. Screw the grease bend pipe and filler adapter assembly on to the outlet at the pump head.



Fig 1

Fig 2

**Now the pump is ready, start the pump by moving the lever handle. If pump needs priming, put some oil through the pump head outlet.**

**Warning:** Do not use steel follower plate when using the pump with tapered grease containers. (Only use rubber follower plate with tapered containers)